




1. Packing List

- 1. Prestigio MultiPad
- 2. AC Adapter
- 3. Carrying Case
- 4. USB Cable
- 5. Quick Start Guide
- 6. Warranty Card
- 7. Legal and Safety Notices
- 8. OTG Cable

2. Device Overview

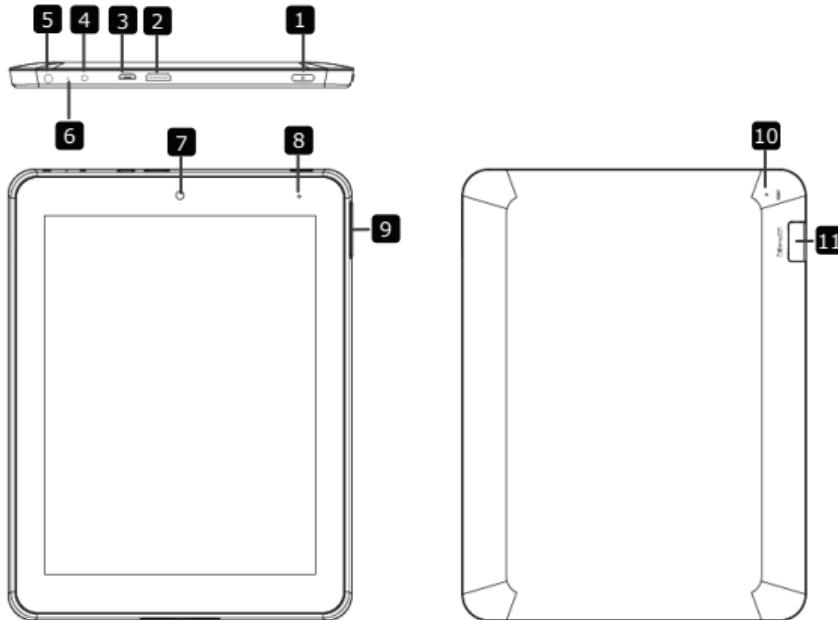



1	Power	Turn on/off the device; Suspend/Activate the device
2	Mini-HDMI video output	HDMI cable connection.
3	USB port	USB connection.
4	DC Port	AC adapter connection.
5	Earphone Jack	Earphones connection.
6	Built-in Microphone	Record sounds.
7	Camera	Take photos.
8	Charging indicator	Turn to red during charging and turn to green as finishing charging.
9	Vol +\ Vol - Button	Adjust the volume level.
10	Reset	Reset the device if it fails to operate correctly.
11	Micro SD Card Slot	Insert Micro SD card.

Getting Started

3. Charging

- Insert the connector of adaptor to the DC port on the device and connect the power adapter to the wall socket for charging.
- Normally it takes approximately 5 hours to fully charge the device. Operating the device while charging with the AC adapter may extend the time of full charging.

4. Power on/Power off

- To turn on the device, press and hold the **Power Button** until you see the start-up screen then release. It will automatically enter the **Home** screen.
- Press the **Power Button** once to enter sleep mode and press it again to awake the device.
- Press and hold the **Power Button**, and then tap on **OK** to power off the device.



5. Inserting a Memory Card

- The device supports micro SD/SDHC cards.
- To insert a Micro SD card, place the card connector towards the front side of the device and the printing side of the card towards the rear side of the device.
- To remove the micro SD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.
- To access the files on the memory card, select **FireBrowser** icon and tap on **SD Card**.

Notice:

When you are reading the file from micro SD card, please don't remove it, or the device could fail to operate correctly.

6. Connecting to Wi-Fi

- In the Home menu press the  icon and select **Settings** icon to access the list of options. Select **Wireless & networks**.
- If the Wi-Fi is off, tap on the Wi-Fi line to turn it on.
- The device will scan for available Wi-Fi networks and display them at the right of the screen.
- Tap on the network you want to connect to. Then tap inside the Wireless password field to make the virtual keyboard appear. Enter the required network information, tap on **Enter**, and then tap on **Connect**.
- Your device will now attempt to establish a connection to the Wi-Fi access point with the network parameters you entered.

7. Transferring content from PC

- Connect the device to your PC/Notebook via USB cable.
- Select the content you want to transfer from your PC/Notebook.
- Drag the content from the PC/Notebook to the device.
- Please do not disconnect the USB cable during loading. It may cause malfunction of the device and files.
- Left click on  to disconnect the device and PC/Notebook safely.



Technical Specifications

Processor	Dual Core ARM Cortex A9 up to 1.5 GHz
RAM	1GB DDR3
Display	8" TFT LCD, Capacitive multi-touch
Resolution	1024 x 768 pixels
Supported File Formats	Video: AVI,3GP, MP4, RM, RMVB, FLV, MOV Audio: MP3/WMA/WAV/OGG/FLAC/APE/AAC Picture: JPEG(Baseline), BMP, GIF (Static) , PNG
Storage capacity	8 GB flash memory (about 6 GB are accessible by user), Memory card slot supports micro SDHC card up to 32 GB
Interfaces	USB 2.0, Micro SD (micro SDHC compatible), USB Host, HDMI
Communications	WiFi (802.11 b/g/n)
Battery	4700 mAh Li-Pol battery
Dimensions	205*155*11 (mm) (L x W x H) (appro.)
Weight	490 g (appro.)
Storage Temperature	-20°C ~ +65°C
Operation Temperature	0°C ~ +50°C
Operation Relative Humidity	20% ~ 90% (40°C)
Storage Relative Humidity	20% ~ 93% (40°C)

Disclaimer

As the Prestigio products are constantly updated and improved, your device's software may have a slightly different appearance or modified functionality than presented in this Quick Start Guide.